




## **Transport temperatures:**

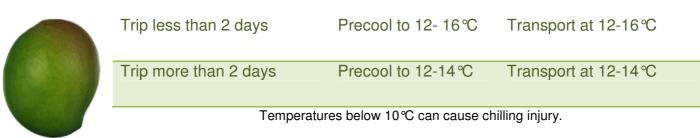

## **Checklist:**

Precool the fruit to the correct temperature before loading. Refrigerated trucks and rail containers only maintain the temperature and do not effectively cool the load.


Check the refrigerator unit is working correctly and vehicle is in good condition.

If a loading dock is present, ensure the truck is already cooled to its operating temperature before loading.

Check the temperature of the fruit before loading and record on consignment note in the event of problems occurring.



Load the vehicle correctly to

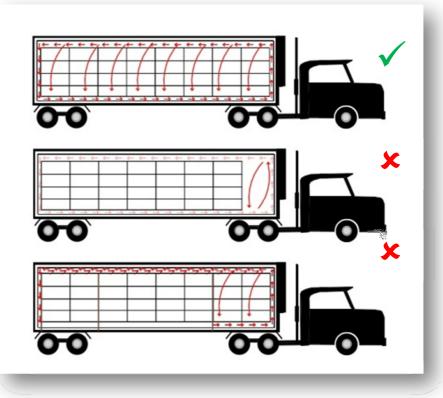

ensure there is a free path for the cool air to flow over the top of the load, down the sides and rear and along the floor and under the pallets (see diagram). Place the front pallets tight against the bulkhead to prevent air short circuiting back to the refrigeration unit. Either cross the stabilising boards or use boards with holes in the bottom to allow air to flow under the pallets.



Ensure the pallets are secured properly.

If the mangoes are loaded warm or are already starting to ripen, open the vents in the vehicle to flush out the carbon dioxide generated by ripening fruit. If vents are not present or are closed, open the doors of the vehicle for 5 minutes every 8-12 hours during the trip.

## **Disclaimer:**

While all care has been taken to ensure that information contained in this information sheet is true and correct at the time of publication, the Northern Territory of Australia gives no warranty or assurance, and makes no representation as to the accuracy of any information or advice contained in this publication, or that it is suitable for your intended use. No serious, business or investment decisions should be made in reliance on this information without obtaining independent and/or professional advice in relation to your particular situation.